

Arrow Head Extractor Specification

BEST AVAILABLE COPY

The Arrow Head Extractor

EASILY REMOVES ARROWHEADS.
ONCE AN ARROWHEAD BECOMES
EMBEDDED INTO A FOREIGN SUBSTANCE, SUCH AS A TREE,
SIMPLY ATTACH THE EXTRACTOR PLATE TO
THE ARROWHEAD, THEN THREAD THE
REMOVING SCREWS INTO THE EXTRACTOR
PLATE AND TIGHTEN DOWN AGAINST THE
FOREIGN OBJECT UNTILL ARROWHEAD IS
EXTRACTED

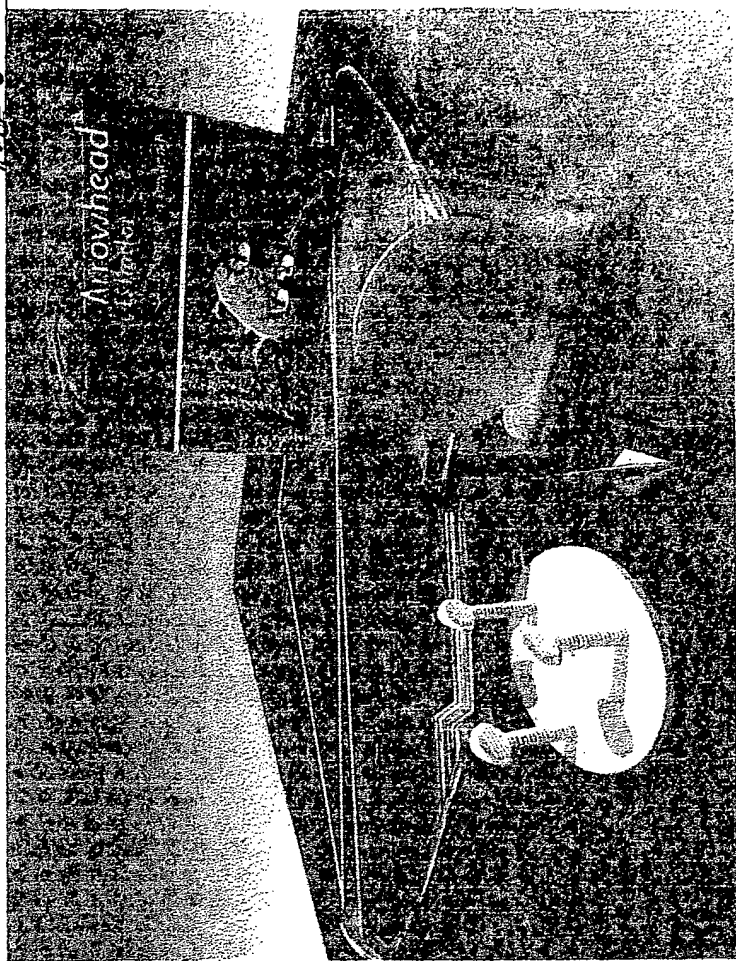


FIG. 1

 


FIG. 2

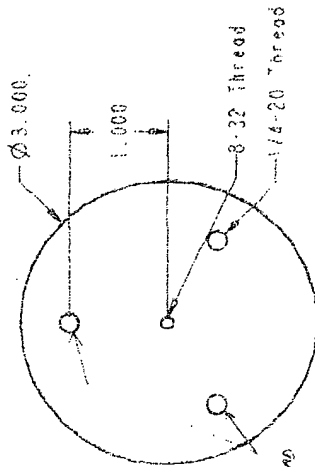


FIG. 3

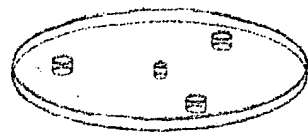


FIG. 4

FIG. 1 - END VIEW
FIG. 2 - TOP VIEW
FIG. 3 - SIDE VIEW
FIG. 4 - SCREWS

EXTRACTOR PLATE INFO.	
1/2	ARROW-26-04

Stamped
Steel
1/225 Thick